

打老鼠II (V05.20)

Hit mouse II (V05.20)

指拔开关(DIP-1)功能:

Finger pull switch (DIP-1) function:

1、几币玩一次

A few dollars to play

SW1

SW1

OFF--1币玩一次

Play OFF--1 coins once.

ON--2币元一次

ON--2 dollar at a time

2、出洞数

2. Number of holes out

SW2

SW2

OFF--55次

OFF--55 times

ON---99次

ON-99 times

3、过关否

3. Whether or not to cross the border

SW3

SW3

OFF--不过关

OFF-- fails.

ON--过关

ON-- clearance

4、退彩数

4. The number of colors returned

SW4

SW4

OFF--退彩票10张

10 tickets returned by OFF--

ON- -退彩票20张

ON- 20 lottery tickets returned

5、调难度

5. Adjusting difficulty

SW5

SW5

OFF--打中次数40/80

OFF-- hit 40 times 80

OF- -打中次数35/70

OF- 35 hits 70

6、 奖法

6. Award method

SW7

SW7

OFF--奖励再玩1次

OFF-- reward play again

ON-- -奖励有奖彩票

ON-- reward lottery tickets

注: 1、 SW6, SW8不用,

Note: 1. SW6, SW8 is not needed,

请保持OFF状态!

Please keep OFF status!

2、 SW3, SW7组合使用!

2, SW3, SW7 combination use!