

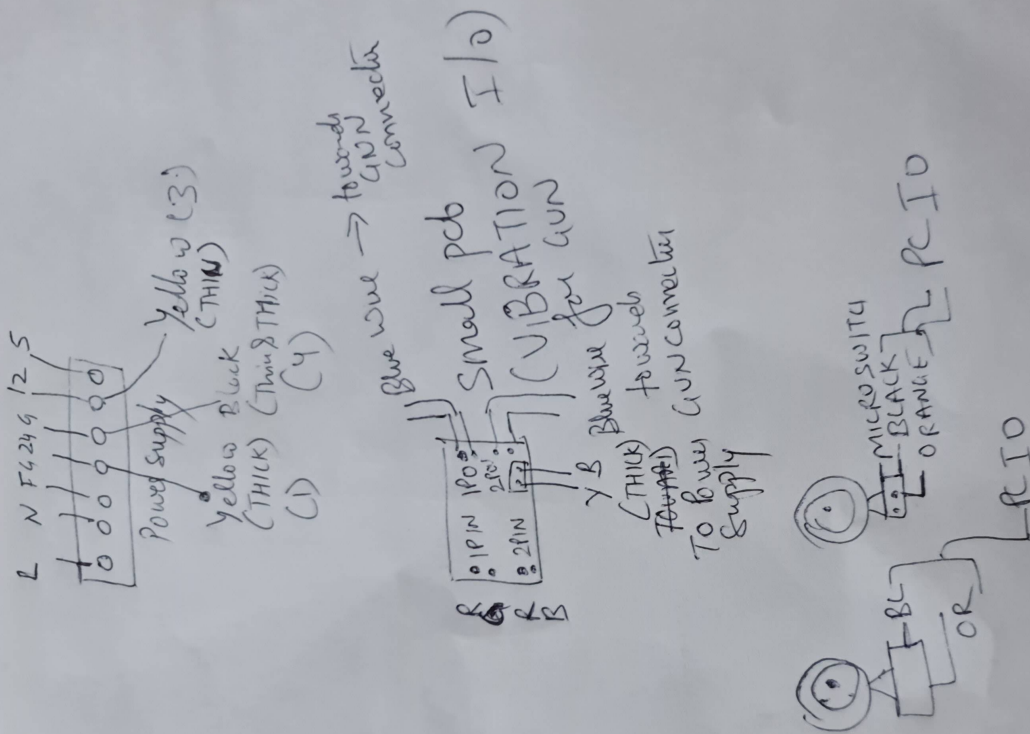


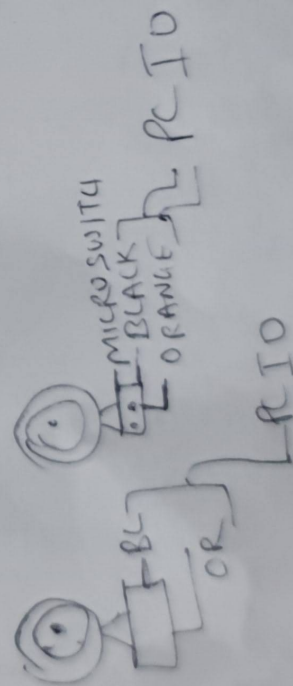

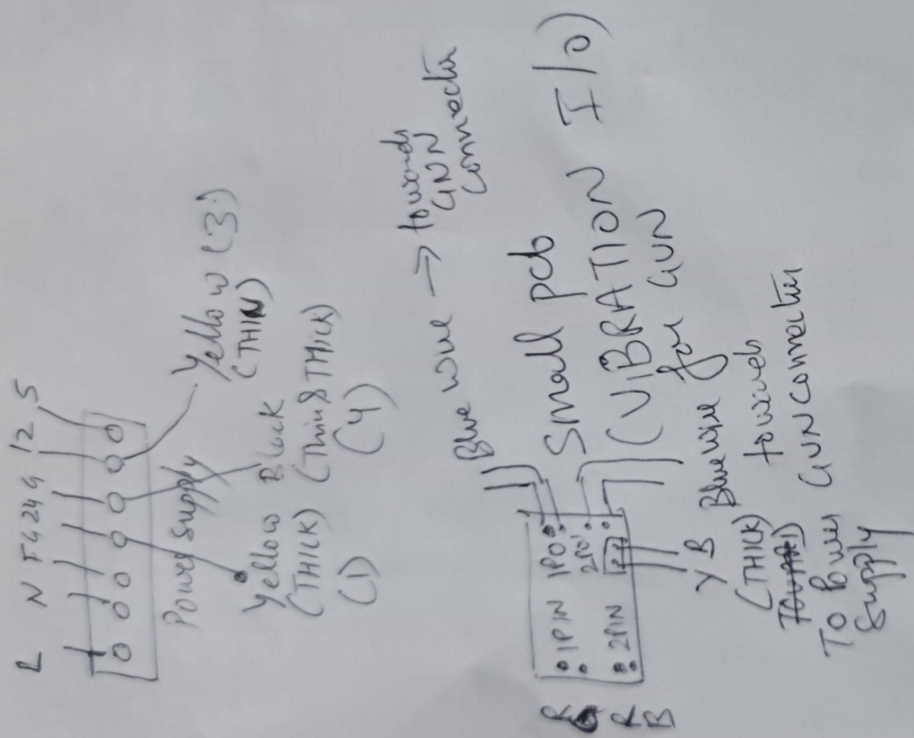

TO Coin Selector
TO PUSH BUTTON
(SETTINGS)

TO VIBRATION
PCB

2F

1F

*8t

